

CORDLESS



ONEPWR™
BATTERY SYSTEM

EVOLVE PET  ELITE
CORDLESS VACUUM

USER GUIDE

F180PUV22Y



IMPORTANT SAFETY INFORMATION

This machine is intended for household use only and NOT for commercial or industrial use. This machine is intended for dry vacuuming only. Do not use this machine for any other purpose. PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

- Don't leave the charger plugged in when unattended.
- Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- Don't use the charger if the power cord or plug is damaged.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery pack ratings label.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use the machine with a damaged battery. If the battery is damaged return the machine, battery and charger to the point of purchase.
- Don't over fill the dirt container to avoid blocking the air flow through the machine.
- The brushbar in the powered head constantly rotates when switched on. Never use the powered head on one spot for an extended period of time as the brushbar may damage the floor surface.
- Only Hoover ONEPWR batteries and chargers should be used with this machine.
- Only Hoover ONEPWR recommended tools and accessories should be used with this machine.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.

IMPORTANT SAFETY INFORMATION

- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- Always protect the charger power cord from heated surfaces or near open flames.
- Only use the machine indoors on dry surfaces and keep the area you're cleaning well lit.
- The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
- Do not use this charger to charge non-rechargeable batteries.
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Store the machine in a cool, dry area. Keep the machine away from rain and moisture.
- Take extra care when using the machine on the stairs.
- Use only Australian/New Zealand approved 10amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- To prevent any damage being sustained, test on an inconspicuous area of the flooring first.
- Always make sure the separator and filter are fitted correctly before using your machine and only use the machine with the filter and separator in place.
- Always check the powered head and accessories are free from damage, dirt and debris before using.
- This machine does not stay upright without constant support. Between uses, lie flat on the floor in a suitable location so that it does not become a trip hazard or can be stepped on.

IMPORTANT SAFETY INFORMATION

BATTERY SAFETY PRECAUTIONS

- Replace the battery with a Hoover ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire.
- The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages avoid any contact with the skin. If liquid comes into contact with the skin, wash immediately with soap and water, then neutralise with lemon juice or vinegar. If liquid gets into the eyes, flush with clean water for at least 10 minutes, then seek immediate medical attention.
- To reduce the risk of fire, personal injury, and product damage due to short circuit, never immerse the tool, battery pack, or charger in fluid or allow fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

Technical Specifications	F180PUV22Y
Product Description	Hoover ONEPWR Evolve Pet Elite Cordless Vacuum
Console Model Number	BH53800ANZV
Product Weight (without battery pack)	3.45kg
Dirt Container Capacity	1.2L
Runtime*	Up to 35 mins
Charge Time (per battery)	3 hours
Charger Model Number	BH05000ANZ
Battery Included	1x 4.0Ah (BH29040ANZV)
Battery Voltage	18V Li-Ion

Compatible Battery Packs

MODEL	TYPE	RATED VOLTAGE	RATED CAPACITY	CELL NUMBER
F18BTP21J4	Li-Ion	18V	4.0Ah	5
BH29040ANZ	Li-Ion	18V	4.0Ah	5
BH29040ANZV	Li-Ion	18V	4.0Ah	5

Subject to technical change without notice.

* Runtime is based on internal testing. Actual runtime will vary under specific conditions or when using different accessories.

Description of Symbols



Regulatory
Compliance
Mark



For Indoor
Use Only



Read User
Manual

DISTRIBUTED BY:

Techtronic Industries Australia Pty Ltd

31 Gilby Road, Mount Waverley, VIC, 3149, Melbourne, Australia

Web Address: www.hoover.com.au

Customer Careline: 1300 698 130

Techtronic Industries N.Z. Limited

Unit C, 70 Business Parade South, East Tamaki, Auckland, 2013, New Zealand

Web Address: www.hoover.co.nz

Customer Careline: 0800 126 688

MACHINE OVERVIEW

EVOLVE PET ELITE CORDLESS VACUUM




MODEL: F180PUV22Y

Subject to technical change without notice. Images are illustrative only.

CHARGING THE BATTERY

THIS MACHINE IS ONLY TO BE USED WITH HOOVER ONEPWR BATTERIES AND CHARGER. PLEASE READ THE BATTERY AND CHARGER USER GUIDES BEFORE USE.

NOTE: Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.

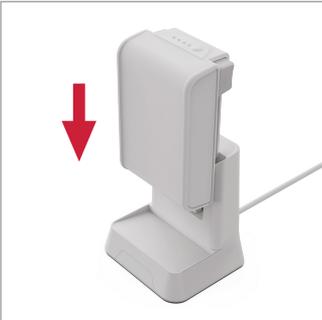

Plug in the charger. Attach the battery pack to the charger by aligning the ribs on the battery pack to the grooves in the charger.



The charger light will flash white to show when the battery is charging. The light on the charger will stop flashing and go off when the battery is fully charged.




Once fully charged, slide the battery off the charger to remove.



To check the battery charge level press the battery symbol.

ASSEMBLING THE VACUUM

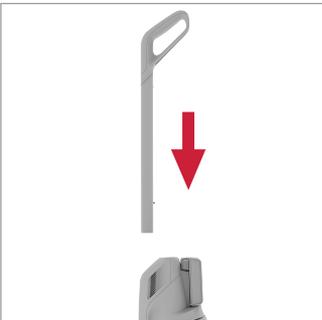

Push the handle into the main body until it clicks into place.


NOTE: The handle contains electrical connections. To ensure that the handle has been correctly installed, please ensure a “click” sound is audible during the installation of the handle.

GETTING STARTED

OPERATION

WARNING: The brushbar in the floorhead constantly rotates when activated. Never use the floorhead on one spot for an extended period of time as the brushbar may damage the surface. To prevent any damage being sustained, test on an inconspicuous area of the flooring/surface first.

CAUTION: Always take extra care when using the vacuum on the stairs.

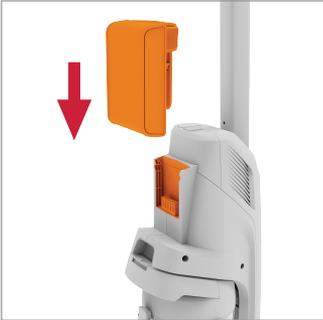


Slide the battery onto the machine until it clicks into place.



Place your foot on the floorhead.



Pull the handle backwards to recline.

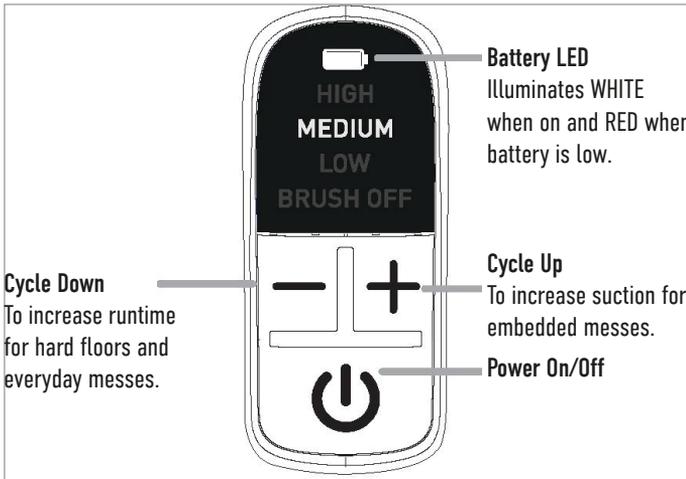

To remove the battery press both the buttons to release.

CAUTION: Store the vacuum safely after use to prevent tripping accidents.

NOTE: When less than 20% charge is remaining the low battery indicator will flash red indicating the battery is running low and charging is required.

CAUTION: If the brushbar in the floorhead has been obstructed, the brushbar motor protection sensor may activate. The brushbar will stop and the machine may switch off. To reset, switch the machine off and remove the battery. Remove the floorhead from the reach wand/handheld and clear any obstruction. Wait 1 minute before refitting the floorhead. Install the battery and switch the machine on.

EMPTYING THE DIRT CONTAINER

WARNING: To reduce the risk of personal injury, always turn power switch off and remove battery before cleaning or servicing.

IMPORTANT: Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use a clean cloth to remove dirt, dust, oil, grease, etc.



Press down the dirt container release button and pull the container to remove.



Hold the dirt container over a bin and press the dirt release button to allow dirt and debris to fall out. To close, push the dirt release door until it clicks into place.



To re-fit, tilt the dirt container and line the front of the container up onto machine. Push back until it clicks into place.

NOTE: For best cleaning results, empty the dirt container after each use.

CLEANING AND MAINTENANCE

CLEANING THE FILTER AND SEPARATOR



Press down the dirt container release button and pull the container to remove.



Press the button on the lid of the dirt container and lift the lid to access the filter. Pull the tab on the filter to remove.



Lift the separator from the dirt container.



Tap the filter and separator against a bin to remove dirt and debris. Wipe over the separator metal shroud with a dry cloth.



Wash the filter under running water (40°C max). Leave for at least 24hrs or until fully dry before replacing.

IMPORTANT: The filter should be tapped over a bin every 4-6 uses, to remove dirt and debris, and replaced every 6-9 months, depending upon use. The filter should be washed every 3 months, or when required. Allow the filter to completely dry before reinstalling.

CAUTION: Ensure both the filter and separator are refitted before use.

IMPORTANT: Don't over fill the dirt container to avoid blocking the air flow through the vacuum cleaner. Do not exceed the MAX line indicated on the side of the dirt container.

REMOVING AND CLEANING THE BRUSHBAR

WARNING: To reduce the risk of personal injury, always turn power switch off and remove battery before cleaning or servicing.


NOTE: If the brushbar in the floorhead has been obstructed, the brushbar motor protection sensor may activate. The brushbar will stop and the machine may switch off. To reset, switch the machine off and remove the battery. Remove the floorhead from the reach wand/handheld and clear any obstruction. Wait 1 minute before refitting the floorhead. Install the battery and switch the machine on.



Lie the machine on its back.




Turn the tab on the brushbar cover anticlockwise to release the brushbar.

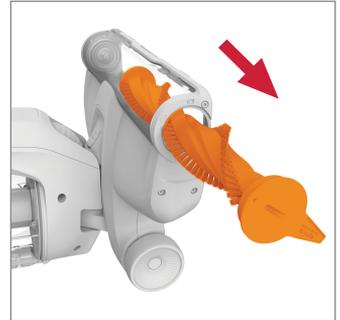


Pull the brushbar out from the housing.



To remove any threads or hair, slide the blade of a pair of scissors into the groove on the brushbar and cut along the groove.

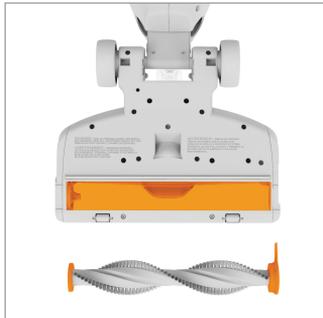

Clear any dirt/debris from the end caps and inside the housing of the floorhead.

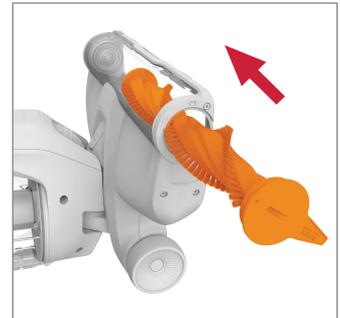

Refit the brushbar into the floorhead.



Align the arrow on the brushbar cover to the unlock symbol. Push firmly and twist the tab clockwise so the arrow is pointing to the lock symbol.

IMPORTANT: For best performance, regularly remove any threads or hair from around the brushbar.

CLEANING AND MAINTENANCE

CHECKING FOR BLOCKAGES



Press down the dirt container release button and pull the container to remove.



Place your foot on the floorhead. Pull the handle backwards to recline and lie flat.



Press the hose release button and pull to release.



Check for any blockages and use a blunt object to remove the blockage.

WARNING: To reduce the risk of personal injury, always turn power switch off and remove battery before cleaning or servicing.

WARNING: To reduce the risk of personal injury, always turn power switch off and remove battery before cleaning or servicing.

THERE IS AN ACCESSORY MISSING

Check the contents on the box.

WHY DOES THE MACHINE HAVE NO POWER?

- The battery is not fitted correctly. See OPERATION page 8.
- The battery has no charge. See CHARGING THE BATTERY page 7.
- The motor thermostat may have tripped. Empty the dirt container and check for blockages. Clean the filters and allow the machine to cool for approximately 1 hour. If you have washed the filters, wait 24 hours to fully dry before placing back on the machine. See CLEANING THE FILTER AND SEPARATOR page 10.
- The brushbar motor sensor has been activated. To reset clear any obstruction, wait 1 minute before switching the machine on. See REMOVING AND CLEANING THE BRUSHBAR page 11 and OPERATION page 8.

WHY WON'T THE MACHINE PICK UP?

- The dirt container may not be correctly fitted. See EMPTYING THE DIRT CONTAINER page 9.
- The dirt container may be blocked. Check the dirt container for blockages. See EMPTYING THE DIRT CONTAINER page 9.
- The filters may be clogged or need replacing. See CLEANING THE FILTER AND SEPARATOR page 10.
- There may be a blockage. See CHECKING FOR BLOCKAGES page 12.

WHY WON'T THE BRUSHBAR ON THE FLOORHEAD TURN?

- The brushbar may be obstructed. See REMOVING AND CLEANING THE BRUSHBAR page 11.



HOOVER.COM.AU
HOOVER.CO.NZ